

Light Pole (LP) Series		Unpacking & Handling Instructions		
Date	Prepared by	Approved by	Document nos	Revision
3 Dec 2020	Ray Ling	Patrick Yeo	MS-LP-UNPACK-001	0

Light Pole Series Antenna Unpacking & Handling Instructions

TABLE OF CONTENTS:

1.00 Light Pole Antenna Overview

- 1.10 Antenna Dimension
- 1.20 Antenna Model
 - 1.21 MS-LP-6-H4-30i (Top Mount)
 - 1.20 MS-LP-6-H4 (Bottom Mount)

2.00 Unboxing Wooden Crate

- 2.10 Open the Crate
- 2.20 Tools
 - 2.21 Electrical Screw Driver
 - 2.22 Crowbar
 - 2.23 Cutter
- 2.30 Antenna Removal
 - 2.31 Remove the Antenna
 - 2.32 2 Person Lifting From Top Pole

3.00 Safe Handling

- 3.10 Lifting-Up From Pole
- 3.20 Lifting-Up From Bottom
- 3.30 "DO NOT" lift by Antenna body (a)
- 3.40 "DO NOT" lift by Antenna body (b)

4.00 Transporting

- 4.10 Manually Carry
- 4.20 By Trolley

5.00 Lifting for Installation


- 5.10 By Boom Lift
- 5.20 By Scissor Lift

Revision History:

Date	Description	Revised by	Revision nos.


email: info@matsing.com website: www.matsing.com Page 1 / 4

1.00 Light Pole Antenna Overview 1.10 Antenna Dimension

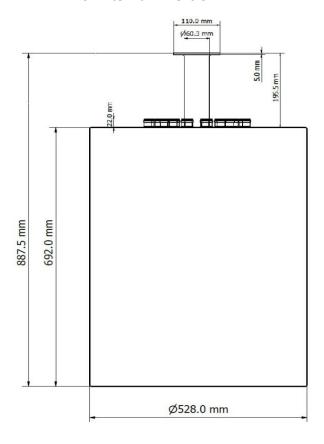


1.20 Antenna Model

- 1.21 MS-LP-6-H4-30i (Top Mount)
- 1.20 MS-LP-6-H4 (Bottom Mount)

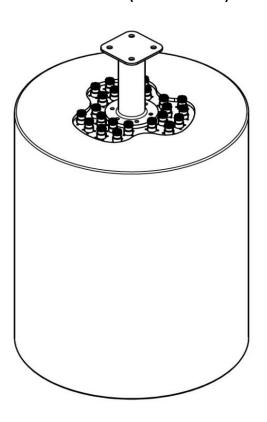

2.00 Unboxing Wooden Crate 2.10 Open the Crate

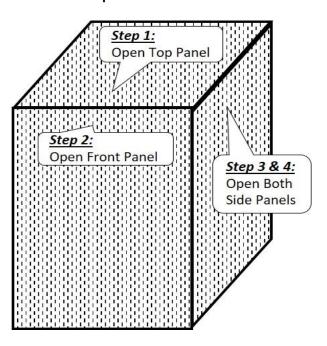

2.20 Tools

2.21 Electrical Screw Driver




2.22 Crowbar



2.23 Cutter



2.30 Antenna Removal
2.31 Remove the Antenna

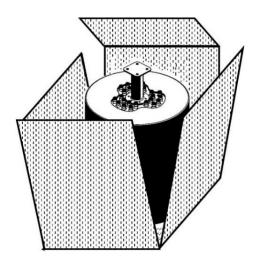

2.32 2 Person Lifting From Top Pole



 
3.00 Safe Handling
3.10 Lifting-Up From Pole




3.20 Lifting-Up From Bottom



3.30 "DO NOT" lift by Antenna body (a)



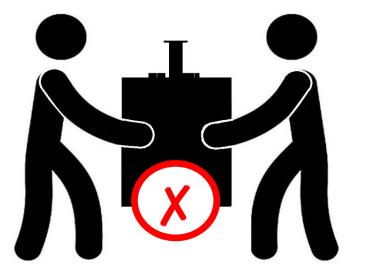



4.00 Transporting 4.10 Manually Carry

4.20 By Trolley



5.00 Lifting for Installation 5.10 By Boom Lift

5.20 By Scissor Lift

