

Date	Prepared by	Approved by	Document nos	Revision
9 Feb 2021	Ray Ling	Pavel	MS-SB17-H-IM-001	01

INSTRUCTION MANUAL MS-SB17-H

TABLE OF CONTENTS:

1.00 BEAMS, CONNECTORS & DIMENSIONS:

- 1.10 Resultant Beam And Connector Layout
- 1.20 Antenna Dimensions
 - 1.21 Rear View
 - 1.22 Side View

2.00 PATTERN DIAGRAM


- 2.10 Horizontal Pattern Frequency: 1710 - 2690 MHz
- 2.20 Vertical Pattern Frequency: 1710 - 2690 MHz

Revision History:

Date	Description	Revised by	Revision nos.
09 Feb 2021	Re-arrange the connector and beam layout	Ray Ling	01


1.00 BEAMS, CONNECTORS & DIMENSIONS:

1.10 Resultant Beam And Connector Layout

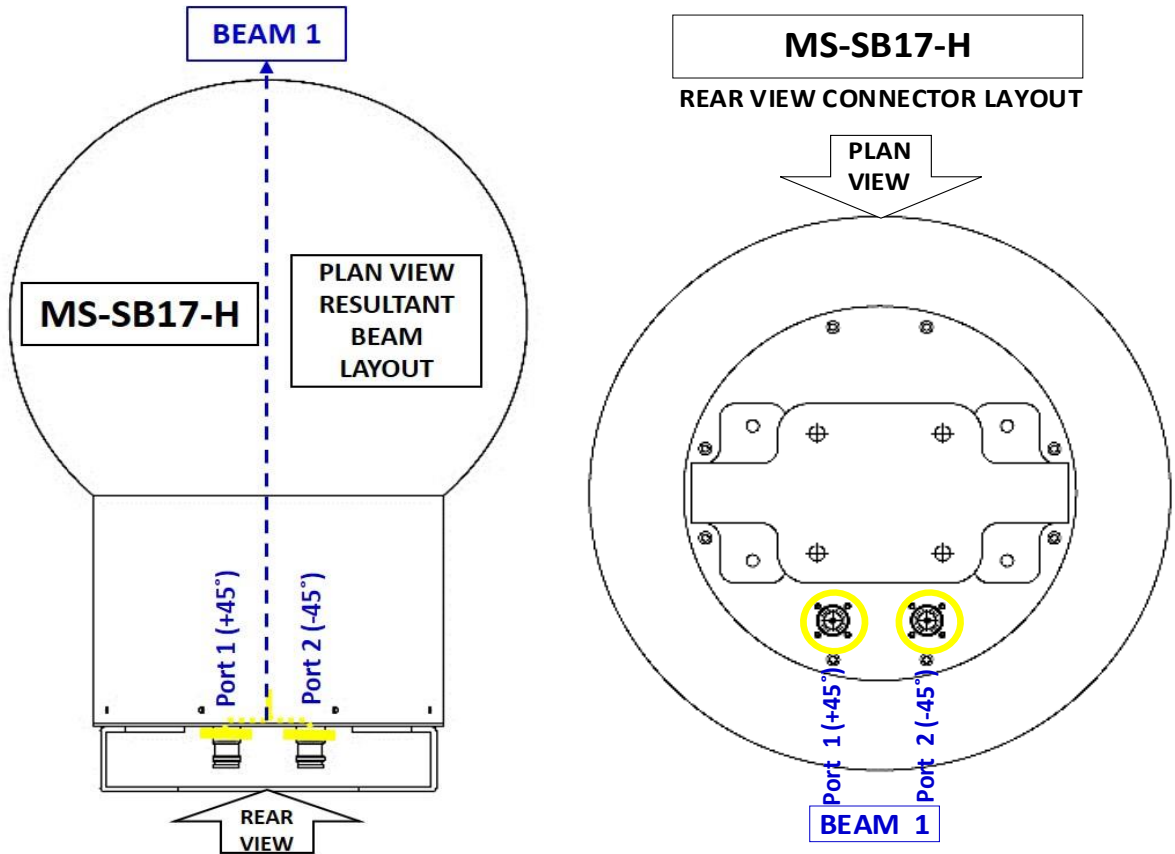


1.20 Antenna Dimensions

1.21 Rear View

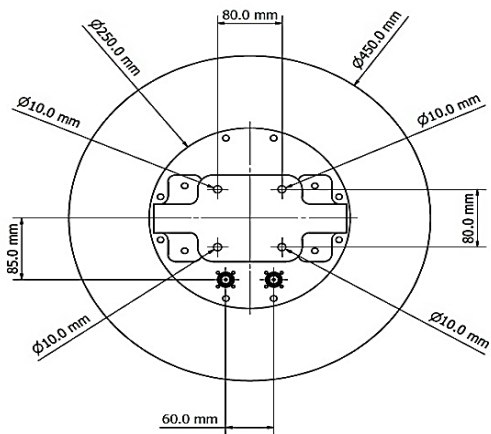


1.22 Side View

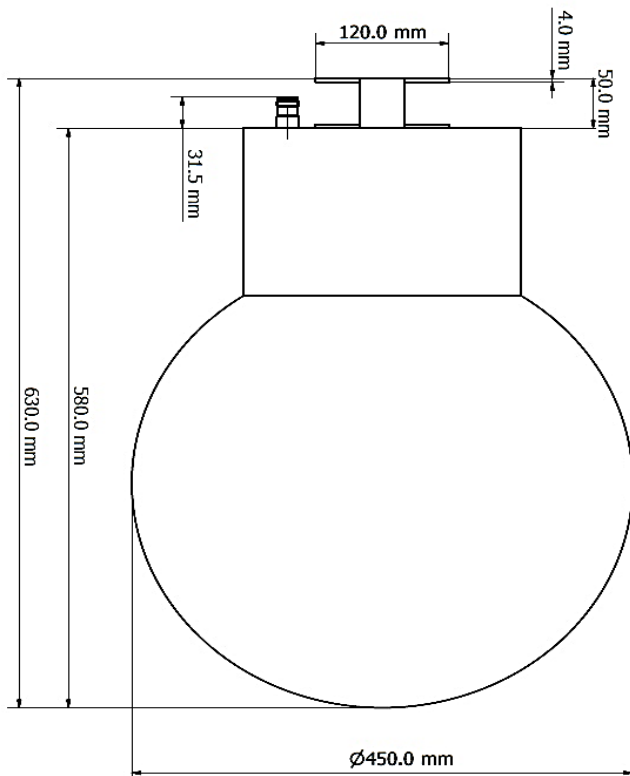

2.00 PATTERN DIAGRAM

2.10 Horizontal Pattern Frequency: 1710 - 2690 MHz

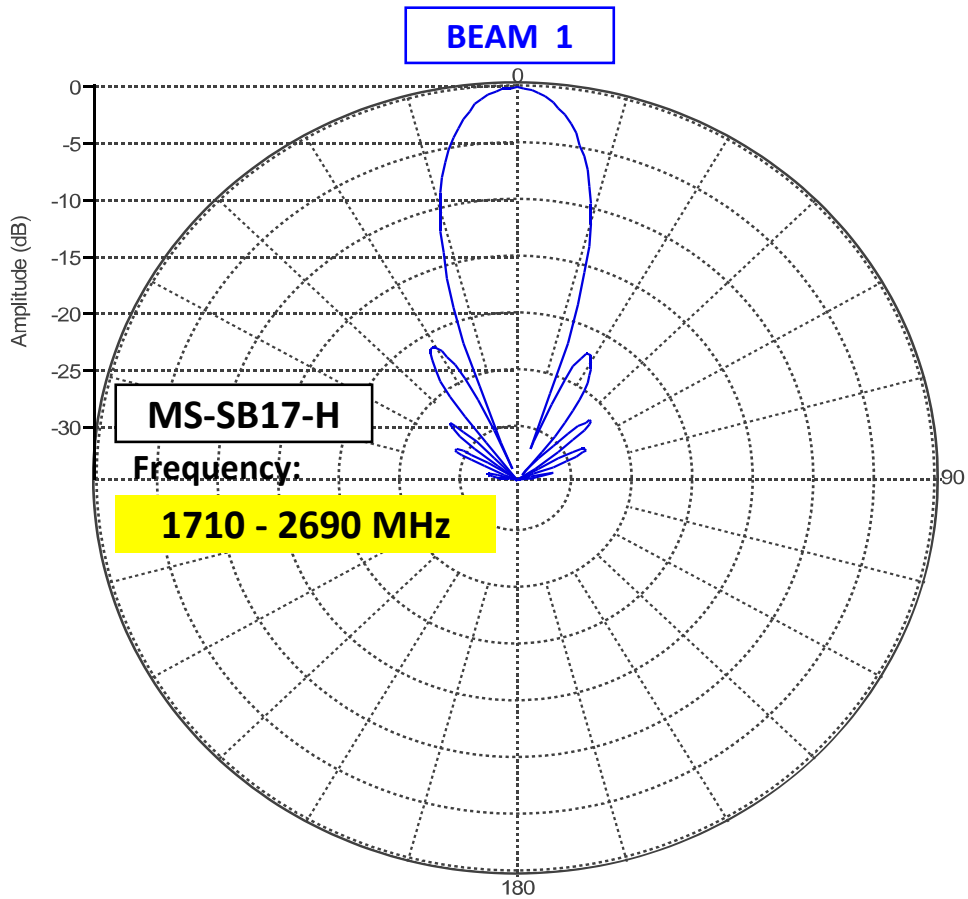

2.20 Vertical Pattern Frequency: 1710 - 2690 MHz

