

Date	Prepared by	Approved by	Document nos	Revision
9 Feb 2021	Ray Ling	Pavel	MS-SB23-H-IM-001	01

INSTRUCTION MANUAL MS-SB23-H

TABLE OF CONTENTS:

1.00 BEAMS, CONNECTORS & DIMENSIONS:

- 1.10 Resultant Beam Layout
- 1.20 Connector Layout
- 1.30 Antenna Dimensions
 - 1.31 Plan View Dimensions
 - 1.32 Side View Dimensions

2.00 PATTERN DIAGRAM


- 2.10 Horizontal Pattern Frequency: 1710 - 2690 MHz
- 2.20 Vertical Pattern Frequency: 1710 - 2690 MHz

Revision History:


Date	Description	Revised by	Revision nos.
09 Feb 2021	Re-arrange the connector and beam layout	Ray Ling	01

1.00 BEAMS, CONNECTORS & DIMENSIONS:

1.10 Resultant Beam Layout

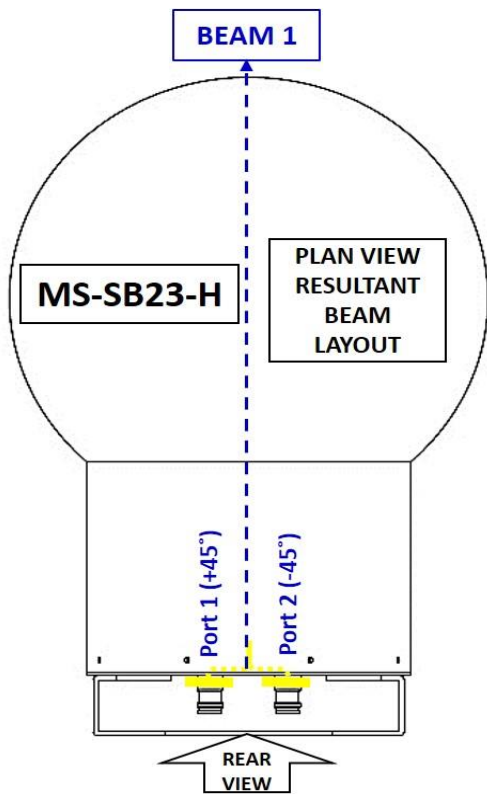


1.20 Connector Layout

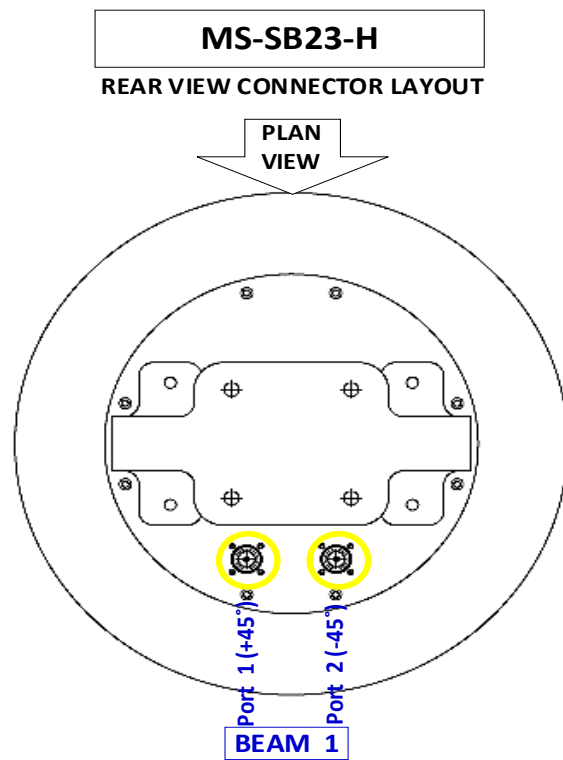


1.30 Antenna Dimensions

1.31 Rear View Dimensions

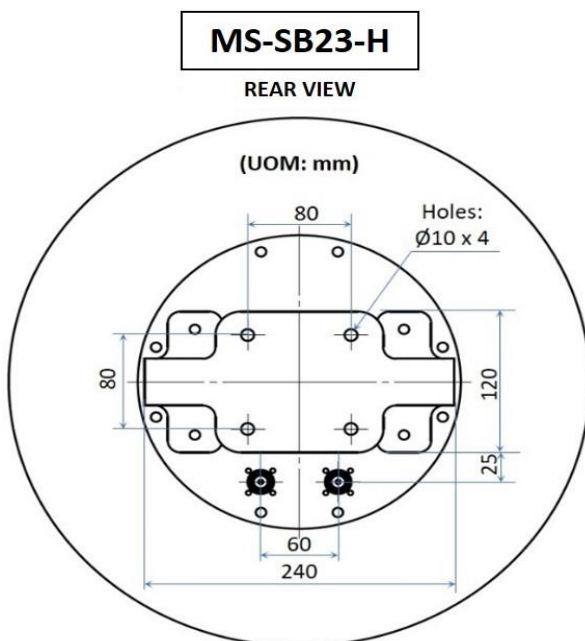


1.32 Bottom-Up View Dimensions

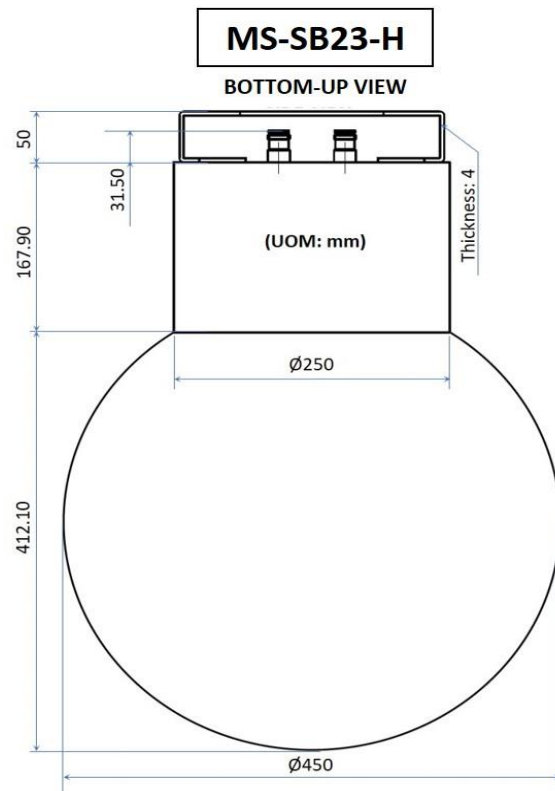

2.00 PATTERN DIAGRAM

2.10 Horizontal Pattern Frequency: 1710 - 2690 MHz

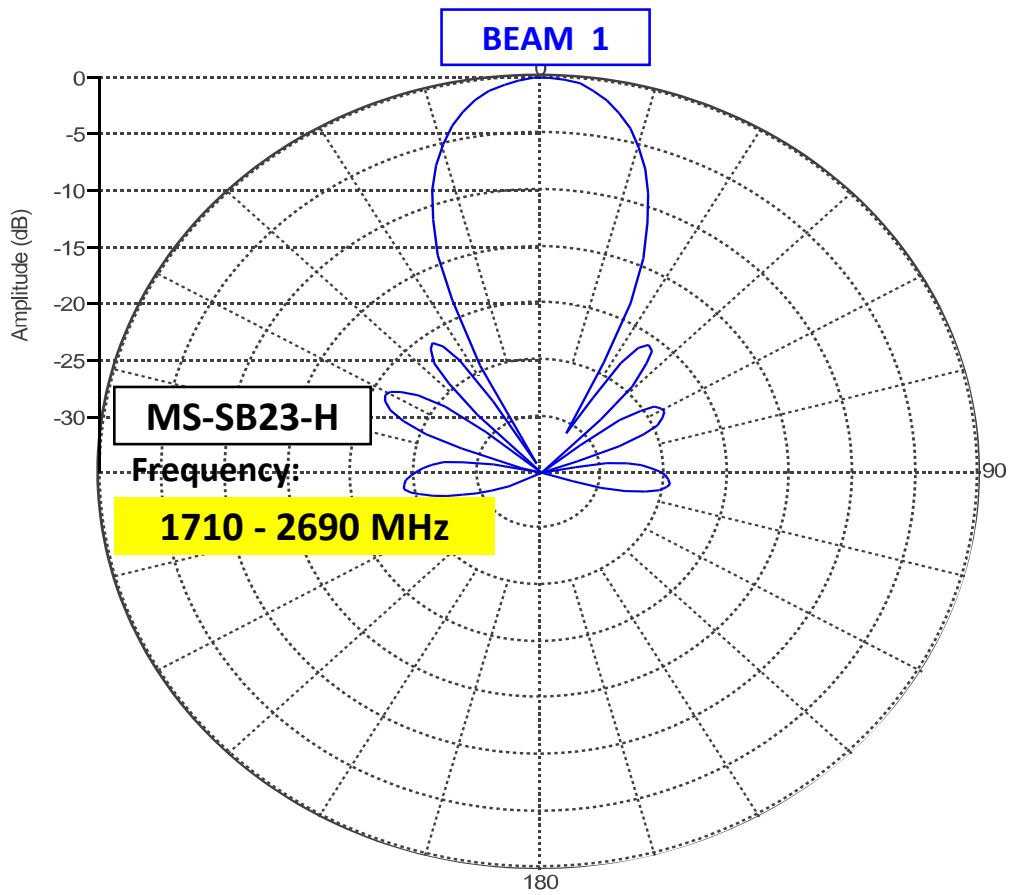

2.20 Vertical Pattern Frequency: 1710 - 2690 MHz

