




LENS TECHNOLOGY ENABLED

MS-SB23-H SLP User Guide
(Stadium Laser Pointer)

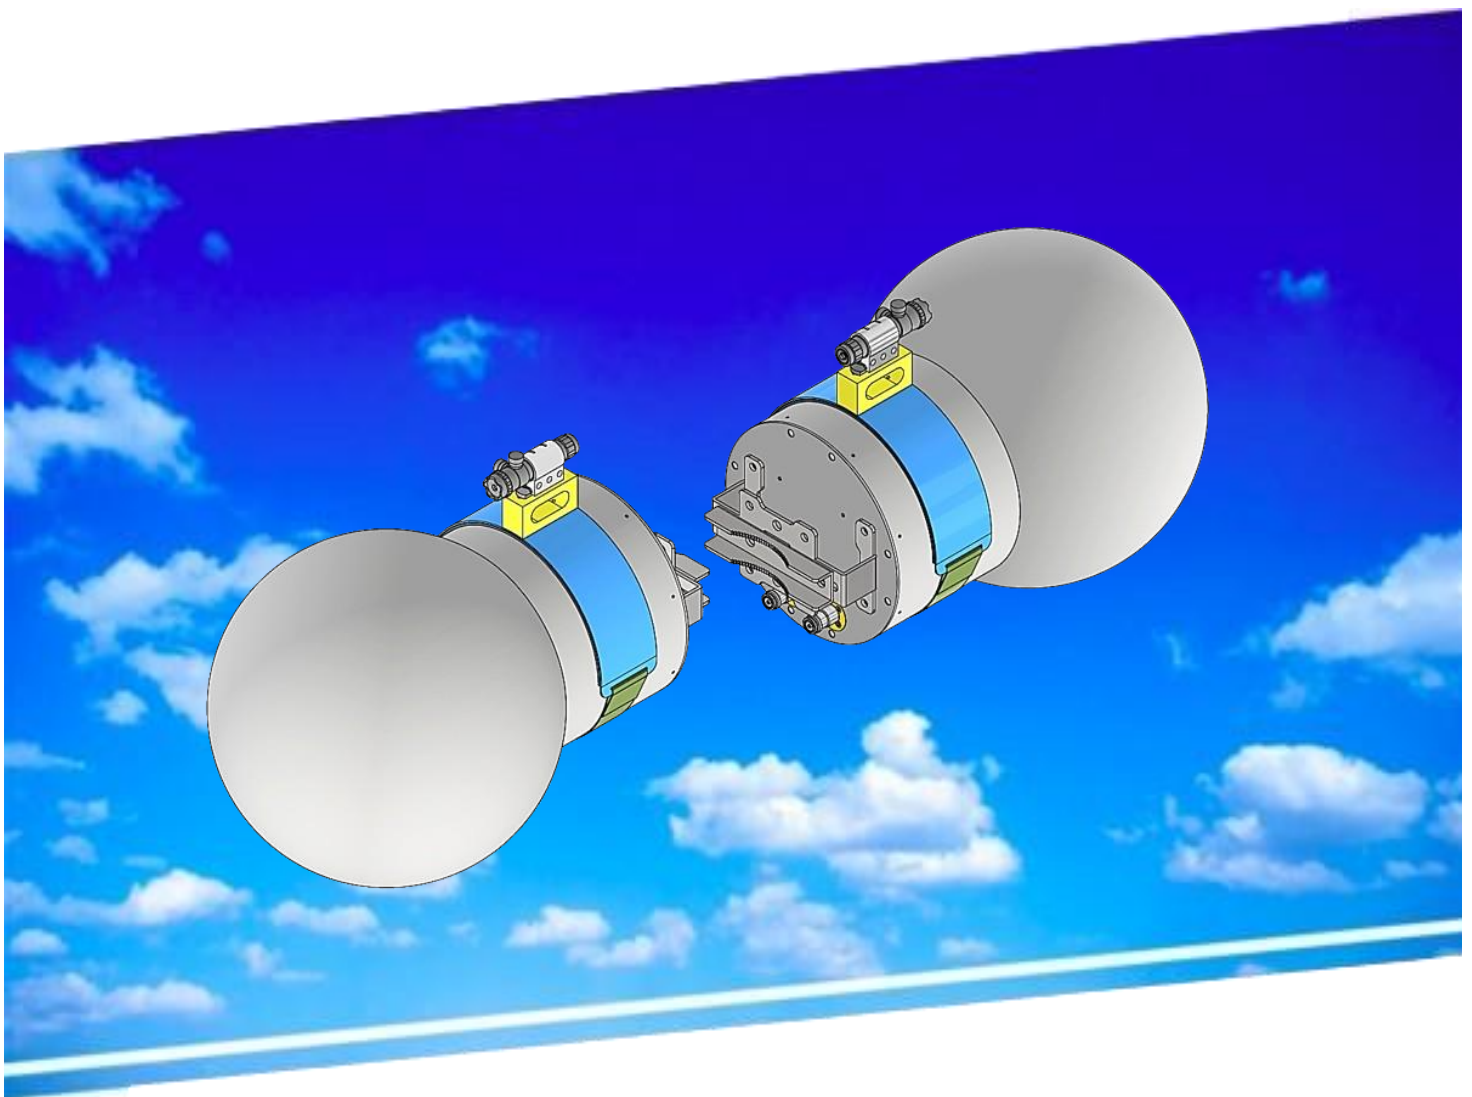

Revision History:

<i>Date</i>	<i>Description</i>	<i>Rev By</i>	<i>Check By</i>	<i>Rev no</i>
18-Jun-2025	Initial Release	RL	Pavel	0

www.matsing.com technicalsupport@matsing.com phone: (800) 867-6429



1.00 SLP: Parts and Assembly

- ① SLP bracket with self-stick Velcro tape.
- ② "BUGLEMAN" Rails Bed. (Not Included)
- ③ "PINTY" Laser Pointer. (Not included)


2.00 Laser pointer: Safety information

⚠ **Never** point this device at reflective surfaces to avoid unintended light dispersion.

⚠ **Use this device** only in accordance with all applicable local and national laser laws and regulations.



⚠ **Never** aim the laser directly at an aircraft or at the eyes of any person or animal. Avoid viewing the laser through magnified or focused optics.

⚠ **This product** is resistant to standard precipitation. Avoid exposing it to pressurized water or allowing its internal electronics to become wet. If moisture exposure occurs, immediately remove the batteries and allow all components to dry completely before resuming use.

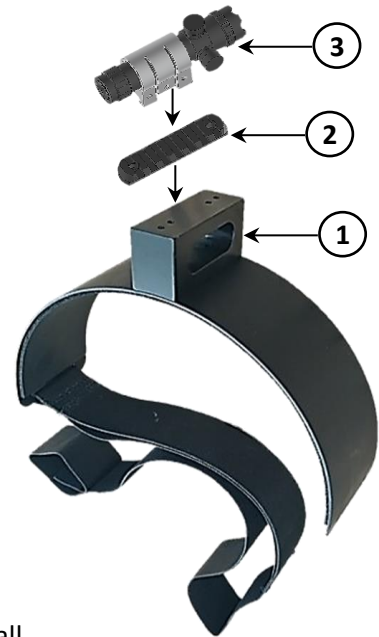

3.00 SLP: Mounting and Positioning

- ④ Wrap the Velcro tape over the antenna body.
- ⑤ Pull the Velcro tape tight and secure it to the body.

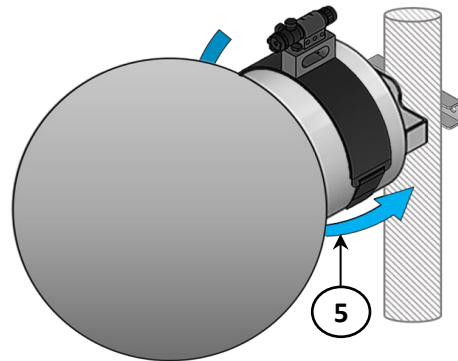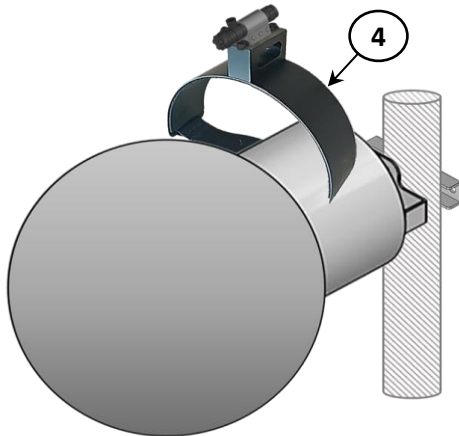

- ⑥ Loosen the pole bracket for laser positioning.
- ⑦ Once the position is confirmed, re-tighten the pole bracket.

