

MS-12.12C90		Instruction Manual				
Date	Prepared by	Approved by	Document nos	Revision		
30 Mar 2024	Ray Ling	Pavel	MS-12.12C90-IM-001	0		

INSTRUCTION MANUAL MS12.12C90

TABLE OF CONTENTS:

1.00 BEAMS & CONNECTORS:

- 1.10 Plan View Resultant Beam Direction (Top & Bottom Lens)
- 1.20 Connector Detail
- 1.30 Rear View Connector Layout
- 1.40 Connector Port Table

2.00 BEAM PATTERN

- 2.10 Horizontal Beam Pattern
- 2.20 Vertical Beam Pattern

3.00 TRANSPORTATION / INSTALLATION

- 3.10 Transportation (From Point to Point)
- 3.20 Bracket Mounting
- 3.30 Installation using a crane
 - 3.31 Lifting the Antenna
- 3.40 Antenna Installation
 - 3.41 Antenna Leveling
 - 3.42 Digital Level Gauge Calibration
 - 3.43 Adjustment Requirement


Revision History:

nevision motory.						
Date	Description	Revised by	Revision			
	Date	Description	nevised by	nos.		


email: info@matsing.com website: www.matsing.com Page 1 / 7

1.00 BEAMS & CONNECTORS:

1.10 Plan View Resultant Beam Direction (Top & Bottom Lens)

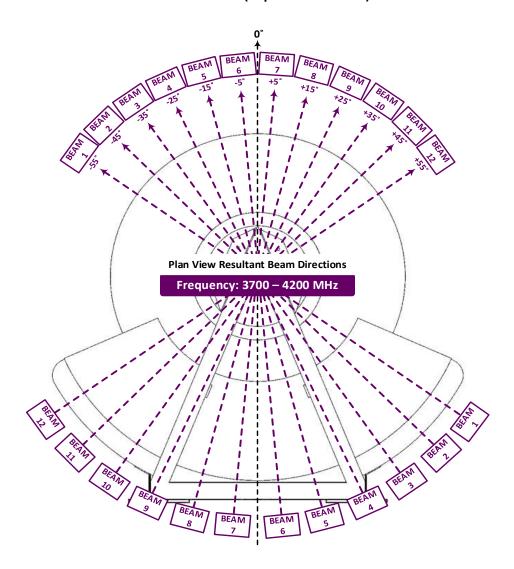

1.20 Connector Detail

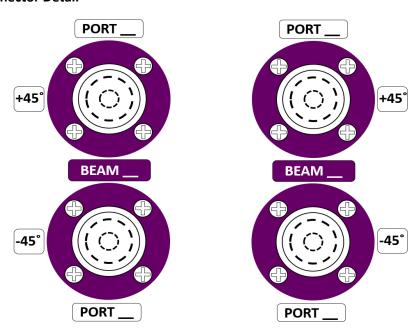

1.30 Rear View Connector Layout MS-12.12C90 REAR VIEW CONNECTOR LAYOUT 6 o 0 0 0 BEAM 7 Port 27 (+45°) Port 28 (-45°) Port 23 (+45°) Port 24 (-45°) BEAM 6 Port 19 (+45°) BEAM 5 Port 20 (-45°) Port 31 (+45°) Port 32 (-45°) BEAM 8 Port 15 (+45°) Port 16 (-45°) BEAM 9 Port 35 (+45°) Port 36 (-45°) Port 30 (-45°) Port 40 (-45°) Port 11 (+45°) BEAM 3 Port 40 (-45) BEAM 11 Port 43 (+45°) Port 44 (-45°) BEAM 12 Port 47 (+45°) Port 48 (-45°) Port 7 (+45°) BEAM 2 Port 8 (-45*) Port 3 (+45*) REAM 1 Port 1 (+45*) Port 2 (-45*) Port 5 (+45*) BEAM 12 Port 45 (+45°) BEAM 11 Port 41 (+45°) Port 42 (-45°) Port 5 (+45°) BEAM 2 Port 37 (+45°) Port 38 (-45°) Port 9 (+45°) Port 10 (-45°) BEAM 3 BEAM 9 Port 33 (+45°) Port 34 (-45°) Port 13 (+45°) Port 14 (-45°) BEAM 8 Port 29 (+45°) Port 30 (-45°) Port 17 (+45°) Port 18 (-45°) BEAM 5 BEAM 7 Port 25 (+45°) Port 26 (-45°) Port 21 (+45°) BEAM 6 **000** AISG IN-1 AISG IN-2 o 0 0 0 FB Beams: FB Beams: 7 to 12 1 to 6 FB Ports: FB Ports: 1 to 24 25 to 48


1.40 Connector Port Table

BEAM	BEAM	BEAM	BEAM	BEAM	BEAM
12	11	10	9	8	7
PORT 47	PORT 43	PORT 39	PORT 35	PORT 31	PORT 27
(+45°)	(+45°)	(+45°)	(+45°)	(+45°)	(+45°)
PORT 48	PORT 44	PORT 40	PORT 36	PORT 32	PORT 28
(-45°)	(-45°)	(-45°)	(-45°)	(-45°)	(-45°)
PORT 45	PORT 41	PORT 37	PORT 33	PORT 29	PORT 25
(+45°)	(+45°)	(+45°)	(+45°)	(+45°)	(+45°)
PORT 46	PORT 42	PORT 38	PORT 34	PORT 30	PORT 26
(-45°)	(-45°)	(-45°)	(-45°)	(-45°)	(-45°)


BEAM	BEAM	BEAM	BEAM	BEAM	BEAM
6	5	4	3	2	1
PORT 23	PORT 19	PORT 15	PORT 11	PORT 7	PORT 3
(+45°)	(+45°)	(+45°)	(+45°)	(+45°)	(+45°)
PORT 24	PORT 20	PORT 16	PORT 12	PORT 8	PORT 4
(-45°)	(-45°)	(-45°)	(-45°)	(-45°)	(-45°)
PORT 21	PORT 17	PORT 13	PORT 9	PORT 5	PORT 1
(+45°)	(+45°)	(+45°)	(+45°)	(+45°)	(+45°)
PORT 22	PORT 18	PORT 14	PORT 10	PORT 6	PORT 2
(-45°)	(-45°)	(-45°)	(-45°)	(-45°)	(-45°)

2.00 BEAM PATTERN

2.10 Horizontal Beam Pattern

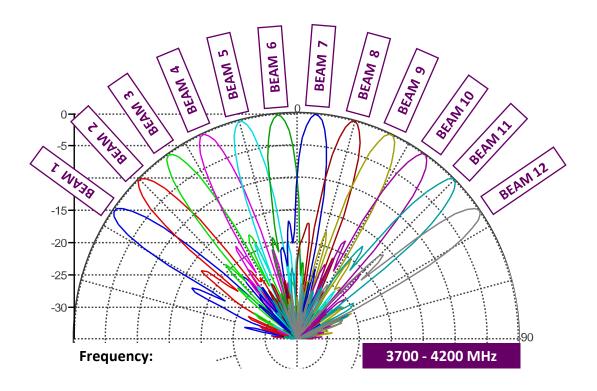

2.20 Vertical Beam Pattern

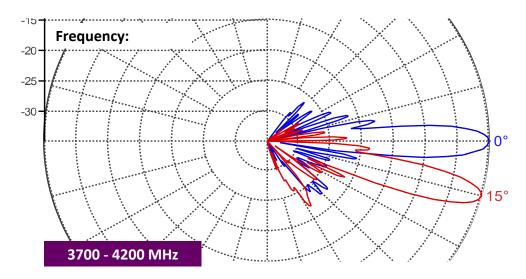



3.00 TRANSPORTATION / INSTALLATION

3.10 Transportation (From Point to Point)

Strictly comply to the Local authority and regulatory on Workplace Safety and Health Control and Measure when moving and transportation of large or heavy equipment, appropriate material handling machine should be use.


(Risk Assessment apply for Forklift or Pallet Truck Lifting)

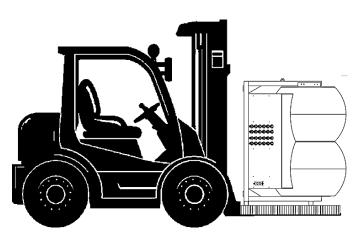

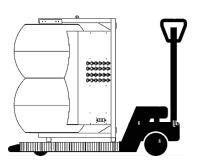

3.20 Bracket Mounting

Item	Lens/Types	Holes Size	Bracket Qty	Bolt & nuts sets
1	30cm to 120cm	Ø 13mm x 8	4	M12 x 15cm=8sets

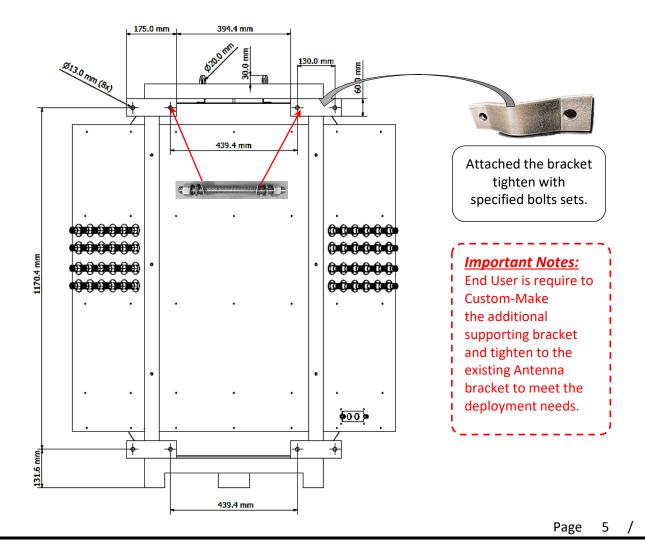


3.30 Installation using a crane

Strictly comply to the local authority and regulatory on Workplace Safety and Health Control and Measure when performing lifting of large or heavy equipment, appropriate material handling machine should be used and only certified personnel should perform the task.

(Risk Assessment requirement applies for both Up-Lifting and Down-Lifting.)

3.31 Lifting the Antenna

The antenna has 2 hook points installed on the top frame (located slightly behind the center of the sphere). These hooks are designed at the center of gravity point of the antenna. A cable, rope can be securely fastened to the hooks and the antenna can be lifted using a crane as pictured below.

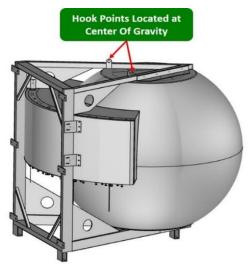








3.40 Antenna Installation

With reference to "Bracket Mounting Procedure", End user is required to Custom-Make the additional supporting bracket and tighten it to the existing Antenna bracket to meet the deployment needs.

3.41 Antenna Leveling

After the Antenna is mounted to the bracket, it is required to be adjusted to 0° (Zero Degree) with ≤0.2° on 3 sides of the frame top level.(Rear, Right & Left=As shown in picture)

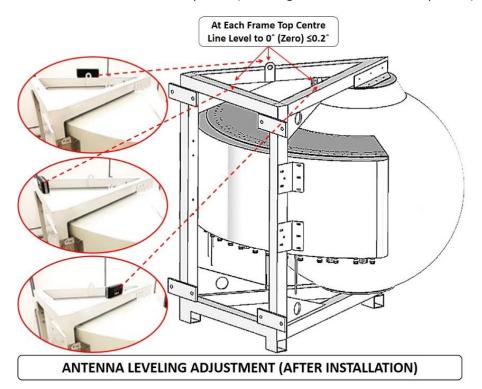

3.42 Digital Level Gauge Calibration



3.43 Adjustment Requirement



