

Date	Prepared by	Approved by	Document nos	Revision
9 Mar 2020	Ray Ling	Patrick Yeo	MS-16H120-IM-001	1

INSTRUCTION MANUAL MS-16H120

TABLE OF CONTENTS:

1.00 BEAMS & CONNECTORS:

- 1.10 Plan View Resultant Beam And Connector Layout
 - 1.11 Beams Projection:
- 1.20 Connector Detail
- 1.30 Connector Ports Table

2.00 PATTERN DIAGRAM

- 2.10 Plan View Beam Pattern:
 - 2.11 Top Row Beam 1 - 6 Frequency: 1710 - 2690 MHz
 - 2.12 Bottom Row Beam 7 -12 Frequency: 1710 - 2690 MHz
- 2.20 Side View Beam Pattern:

3.00 STRUCTURE & CONFIGURATIONS

- 3.10 Emitting Elements Structure
- 3.20 Elements Position & Beam Direction
- 3.30 Elements & Beams Projectably Direction
- 3.40 Rear View Elements Setting Configuration (Example)
 - 3.41 Configuration Table for Accept or Collide (Example)
- 3.50 Central Position Setting
- 3.60 Minimum Gap Setting

4.00 MANUAL TILT ADJUSTMENT

5.00 TRANSPORTATION / INSTALLATION


- 5.10 Transportation (From Point to Point)
- 5.20 Bracket Mounting
- 5.30 Installation using a crane
 - 5.31 Lifting the Antenna
- 5.40 Antenna Installation
 - 5.41 Antenna Leveling
 - 5.42 Digital Level Gauge Calibration
 - 5.43 Adjustment Requirement

Revision History:


Date	Description	Revised by	Revision nos.
09 Mar 2020	Revised all the elements and beam layout	Ray Ling	1

1.00 BEAMS & CONNECTORS:


1.10 Plan View Resultant Beam And Connector Layout

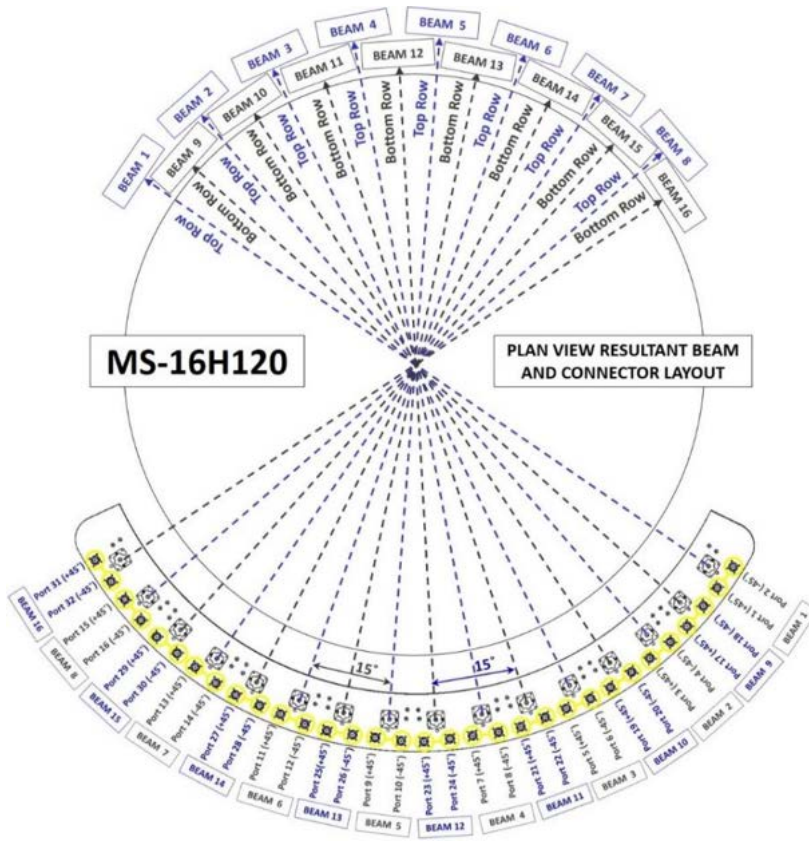

1.11 Beam Projection

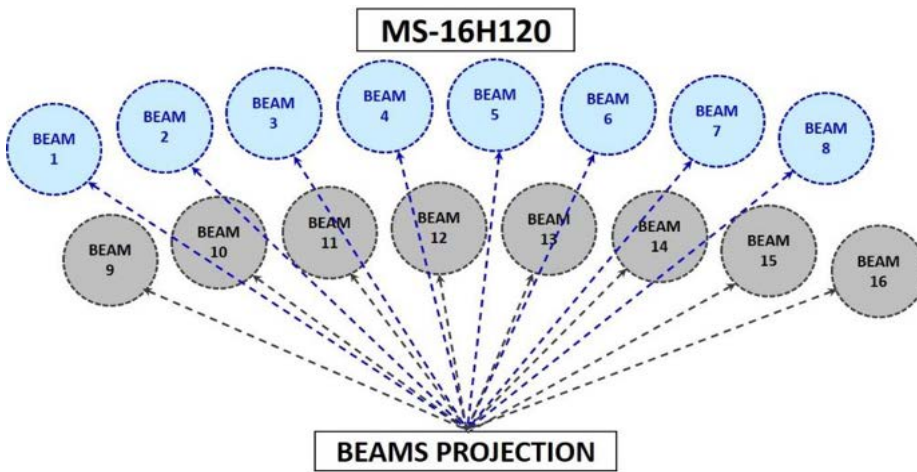

1.20 Connector Detail

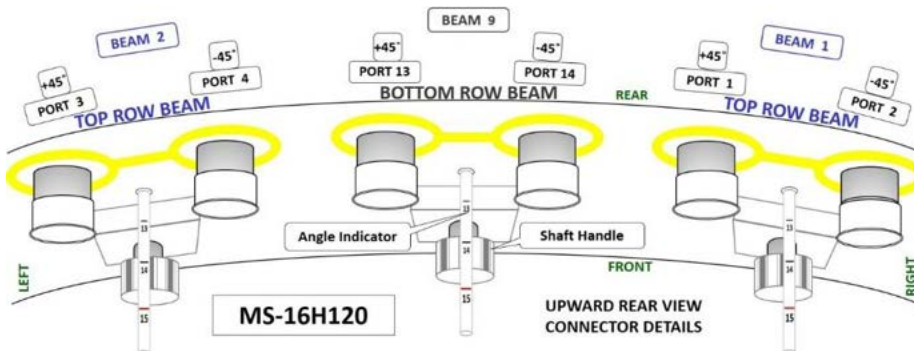


1.30 Connector Ports Table

BEAM 1	BEAM 2	BEAM 3	BEAM 4	BEAM 5	BEAM 6	BEAM 7	BEAM 8	BEAM 9	BEAM 10	BEAM 11	BEAM 12	BEAM 13	BEAM 14	BEAM 15	BEAM 16
Port 1	Port 3	Port 5	Port 8	Port 10	Port 12	Port 14	Port 16	Port 18	Port 20	Port 22	Port 24	Port 26	Port 28	Port 30	Port 32
(-45°)	(+45°)	(-45°)	(+45°)	(-45°)	(+45°)	(-45°)	(+45°)	(-45°)	(+45°)	(-45°)	(+45°)	(-45°)	(+45°)	(-45°)	(+45°)
Top Row	Bottom Row	Top Row	Bottom Row	Top Row	Bottom Row	Top Row	Bottom Row	Top Row	Bottom Row	Top Row	Bottom Row	Top Row	Bottom Row	Top Row	Bottom Row


2.00 PATTERN DIAGRAM

2.10 Plan View Beam Pattern:


2.11 Top Row Beam 1 - 8 Frequency: 1710 - 2690 MHz

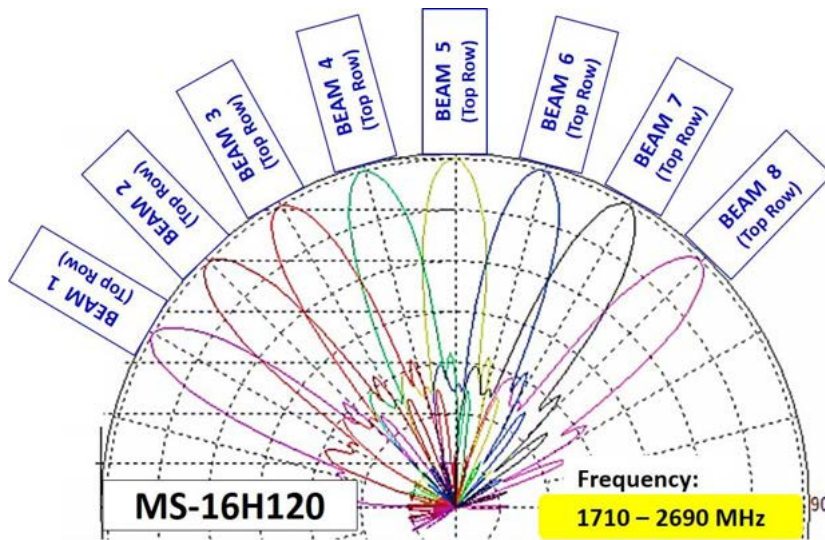

2.12 Bottom Row Beam 9 - 16 Frequency: 1710 - 2690 MHz

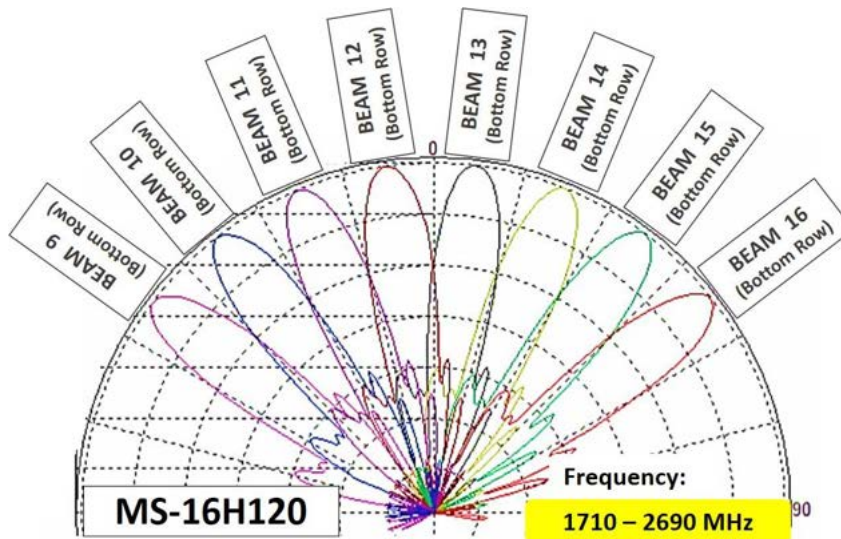


2.20 Side View Beam Pattern:

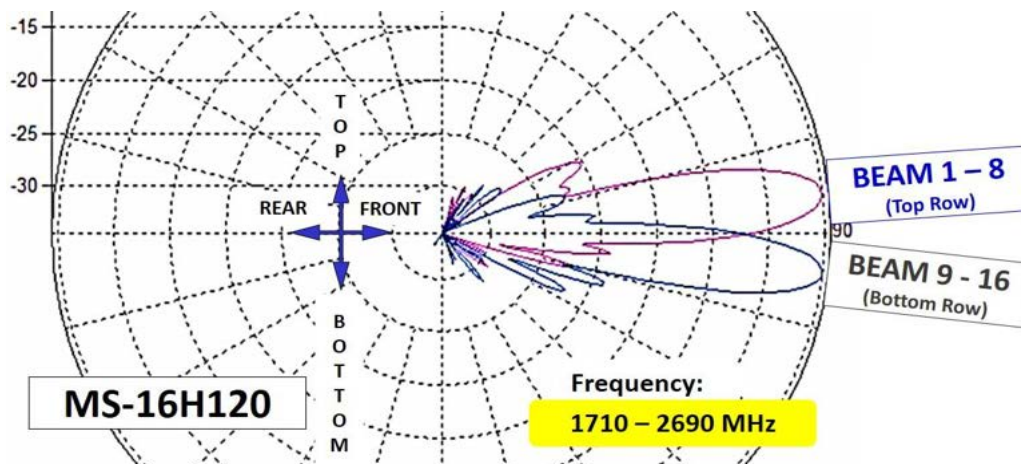


3.00 STRUCTURE & CONFIGURATIONS

3.10 Emitting Elements Structure

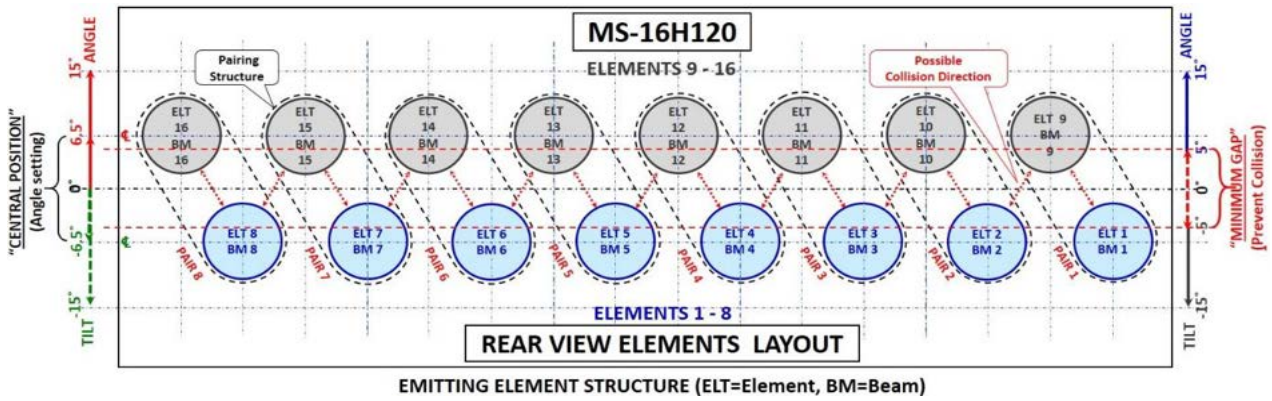


3.20 Elements Position & Beam Direction

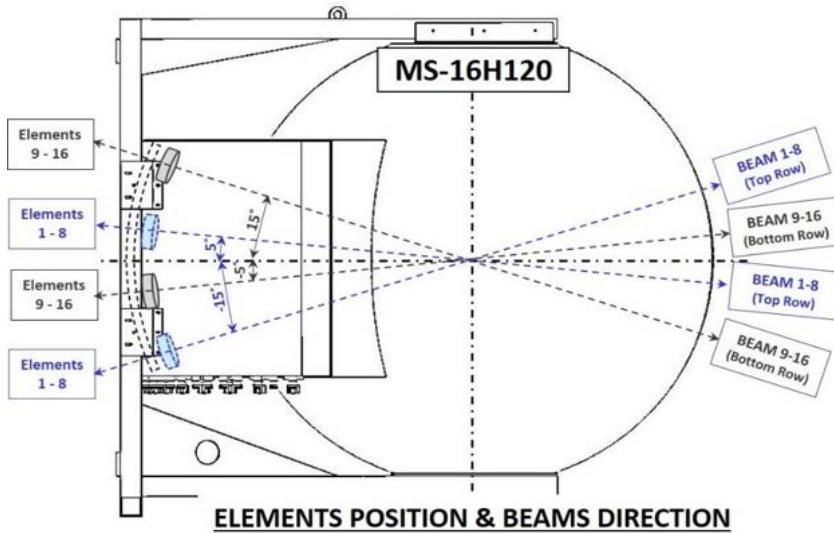


Setting	Min. Tilt	Max Tilt
Beams 9 - 16	-5°	+15°
Beams 1 - 8	-15°	+5°

3.30 Elements & Beams Projectably Direction

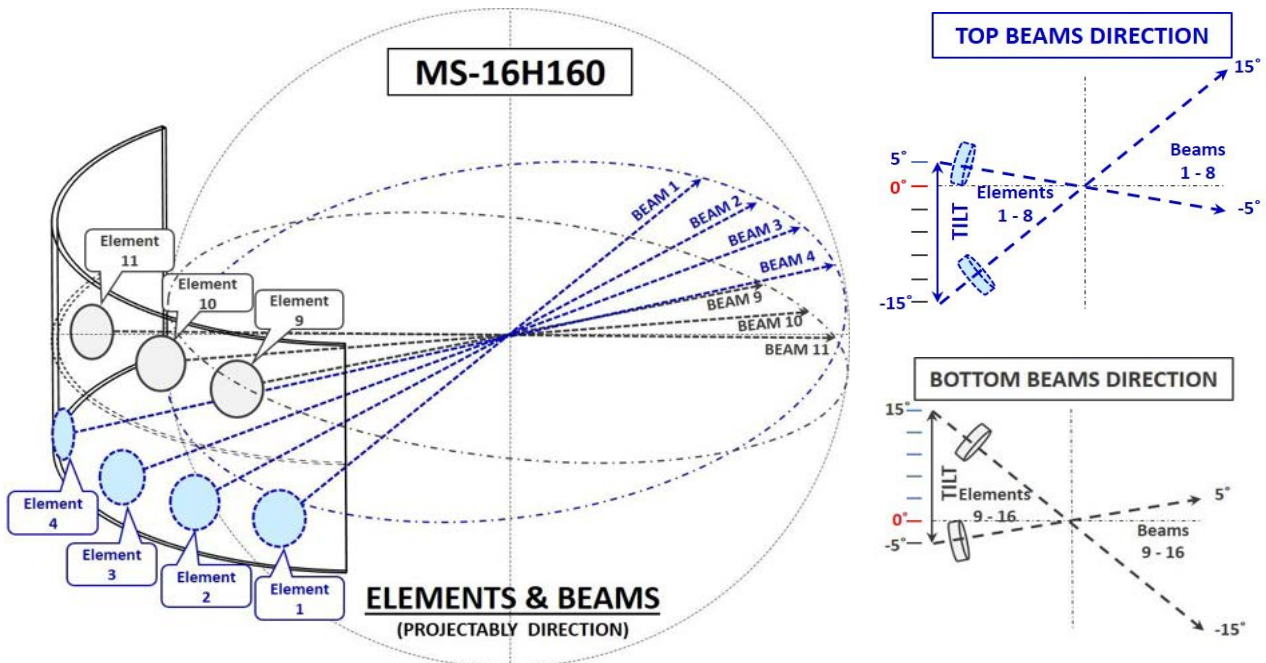



3.40 Rear View Elements Setting Configuration (Example)

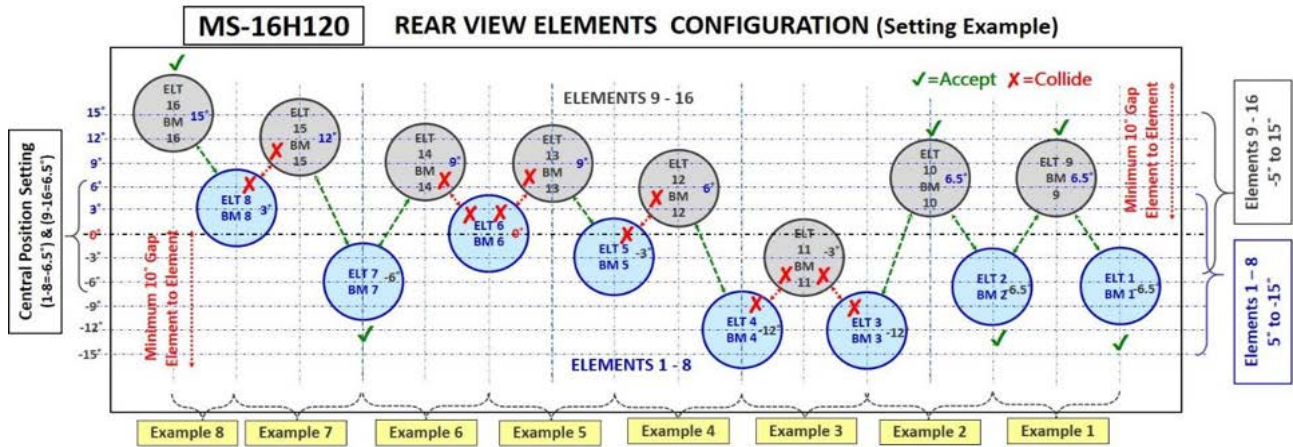


3.41 Configuration Table for Accept or Collide (Example)

Example 8	Example 7	Example 6	Example 5	Example 4	Example 3	Example 2	Example 1	Example
Element 16/ Beam 16	Element 15/ Beam 15	Element 14/ Beam 14	Element 13/ Beam 13	Element 12/ Beam 12	Element 11/ Beam 11	Element 10/ Beam 10	Element 9/ Beam 9	E/B nos
15°	12°	9°	9°	6°	-3°	6.5°	6.5°	Set at
E/B nos	Element 8/ Beam 8	Element 7/ Beam 7	Element 6/ Beam 6	Element 5/ Beam 5	Element 4/ Beam 4	Element 3/ Beam 3	Element 2/ Beam 2	Element 1/ Beam 1
Set at	3°	-6°	0°	-3°	-12°	-12°	-6.5°	-6.5°
Angle Δ	12°	9°	18°	15°	9°	9°	12°	9°
Accp/Coll	✓	✗	✓	✓	✗	✗	✓	✓

3.50 Central Position Setting

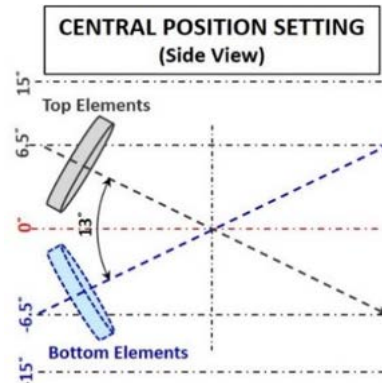
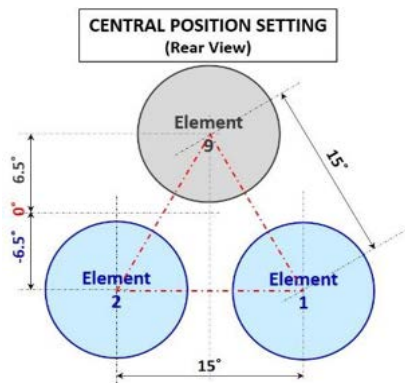


3.60 Minimum Gap Setting

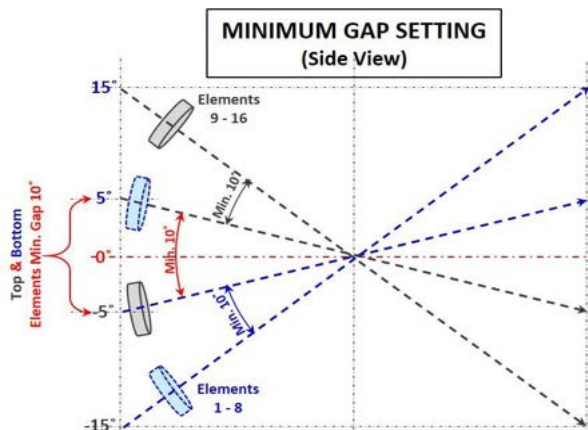

4.00 MANUAL TILT ADJUSTMENT


Step 1: Tilt Stopper Loosening. Step 2: Adjusting the Tilt. Step 3: Tilt Stopper Tightening.

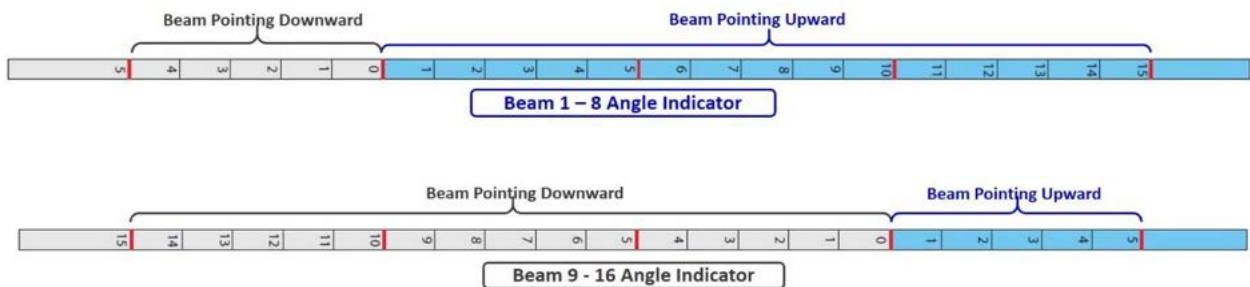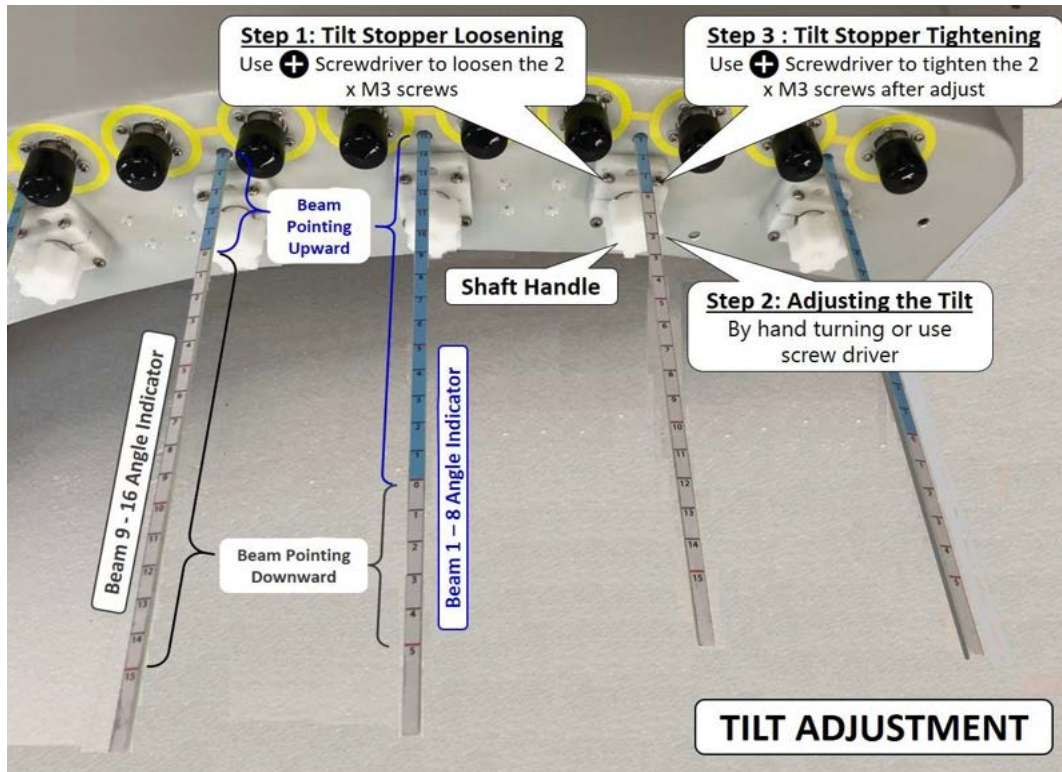

5.00 TRANSPORTATION / INSTALLATION

5.10 Transportation (From Point to Point)

Strictly comply to the local authority and regulatory on Workplace Safety and Health Control and Measure when moving and transporting of large or heavy equipment. Appropriate material handling machine should be used. **(Risk Assessment applies for Forklift or Pallet Truck Lifting)**

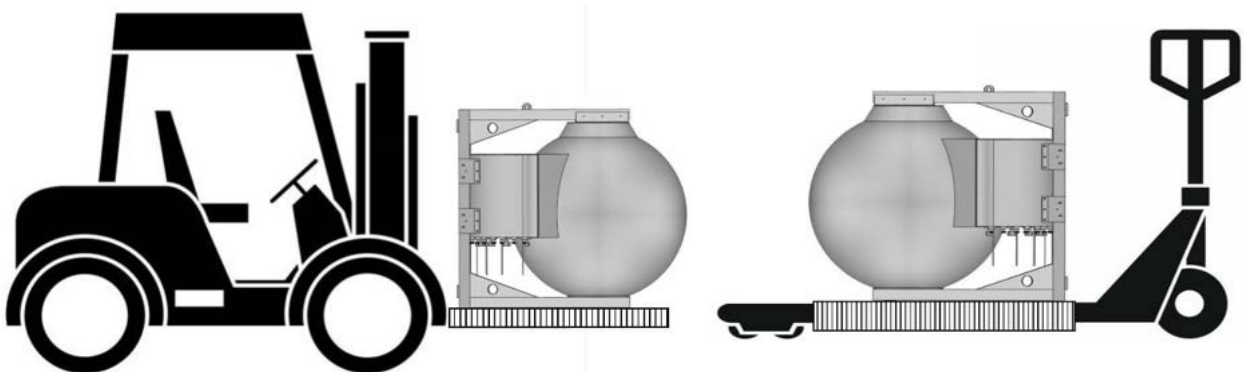


5.20 Bracket Mounting

Lens Size (Model)	Bracket Qty (pc)	Bolt & Nuts Size	Bolts Set (pc)
MS-XXX180 Lens	6	M14 x 15cm	12
MS-XXXX 60,90,120 Lens	4	M12 x 15cm	8



Tighten to the pole with Bolt & Nuts Sets

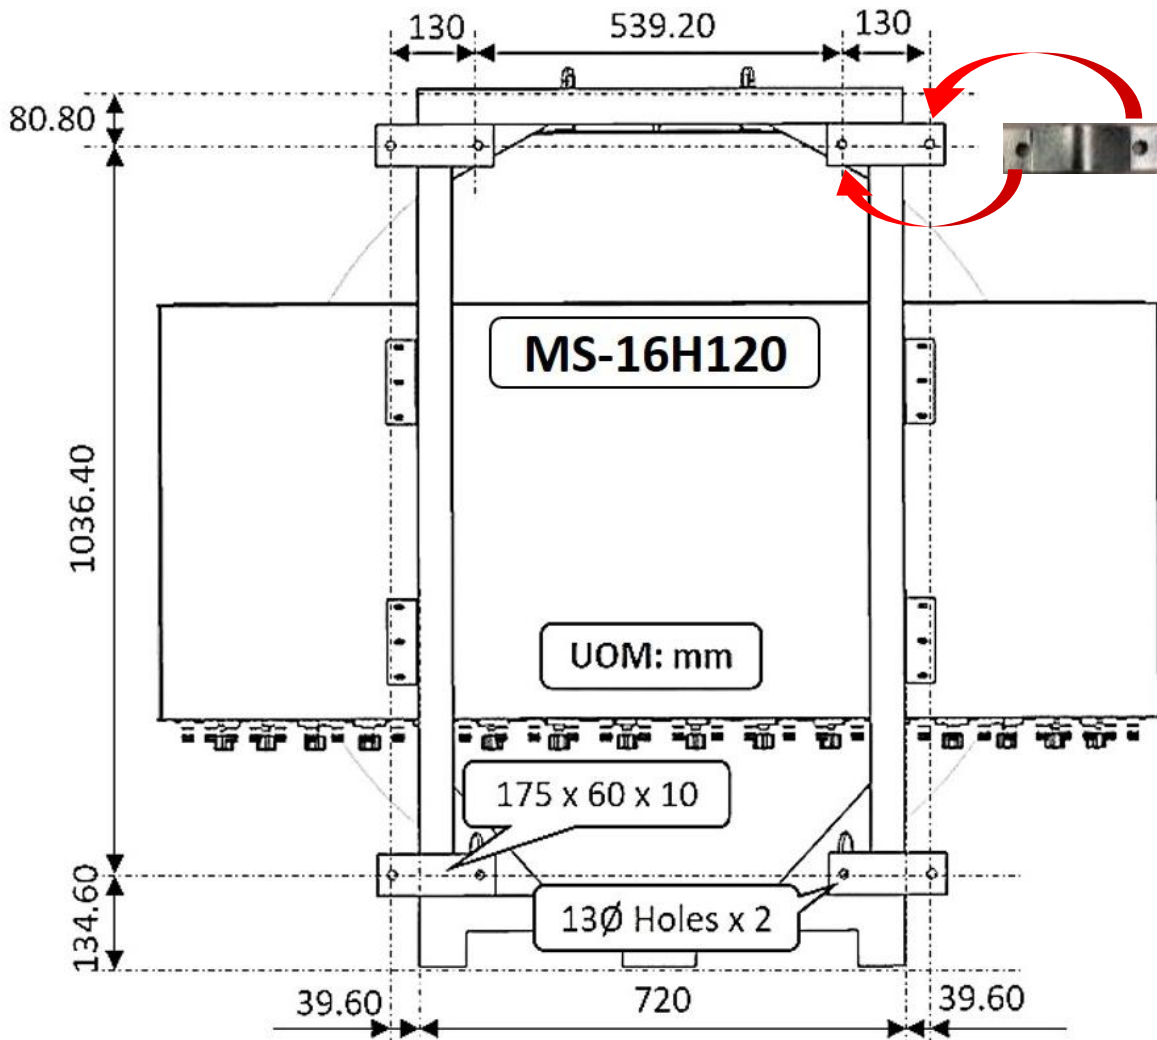

Important Notes:

End User is required to CUSTOM-MAKE the additional supporting bracket and tighten it to the existing Antenna bracket to meet the deployment needs.


5.30 Installation using a crane

Strictly comply to the local authority and regulatory on Workplace Safety and Health Control and Measure when performing lifting of large or heavy equipment, appropriate material handling machine should be used and only certified personnel should perform the task.

(Risk Assessment requirement applies for both Up-Lifting and Down-Lifting.)

5.31 Lifting the Antenna

The antenna has 2 hook points installed on the top frame (located slightly behind the center of the sphere). These hooks are designed at the center of gravity point of the antenna. A cable, rope can be securely fastened to the hooks and the antenna can be lifted using a crane as pictured below.

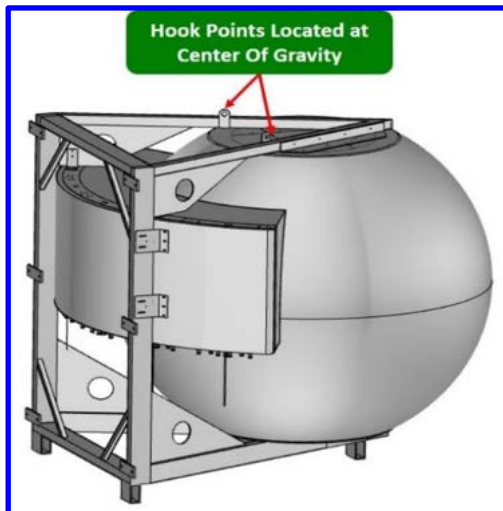


5.40 Antenna Installation

With reference to **Item 5.2 Bracket Mounting Procedure**, End user is required to Custom-Make the additional supporting bracket and tighten it to the existing Antenna bracket to meet the deployment needs.

5.41 Antenna Leveling

After the Antenna is mounted to the bracket, it is required to be adjusted to 0° (Zero Degree) with $\leq 0.2^\circ$ on 3 sides of the frame top level. (Rear, Right & Left=As shown in picture)

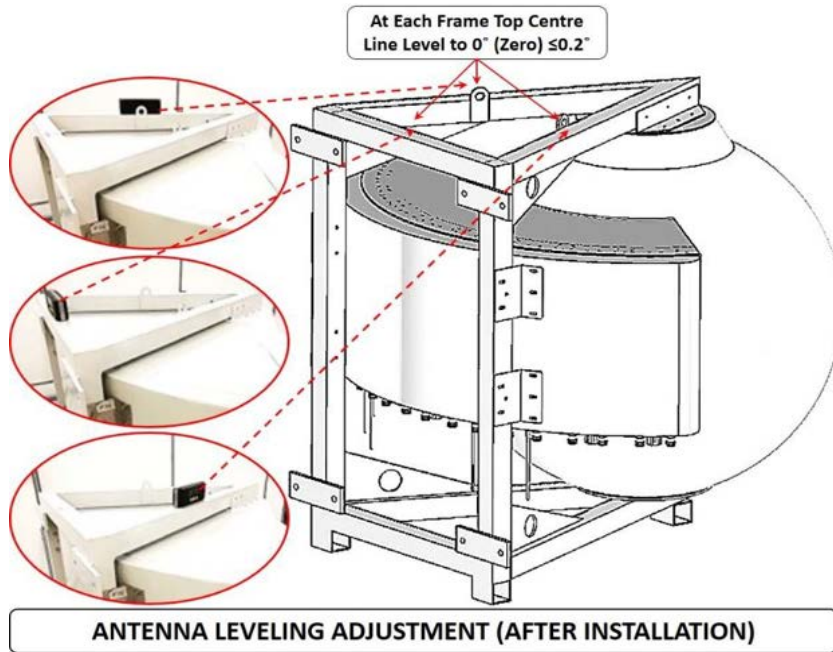

5.42 Digital Level Gauge Calibration



5.43 Adjustment Requirement

