

Date	Prepared by	Approved by	Document nos	Revision
9 Nov 2023	Ray Ling	Pavel	MS-84-120-IM-001	4

INSTRUCTION MANUAL MS-8.4DB120

TABLE OF CONTENTS:

1.00 BEAMS & CONNECTORS:

- 1.10 Plan View Resultant Beam Direction
- 1.20 Plan View Connector Layout
- 1.30 Ports Table

2.00 PATTERN DIAGRAM

- 2.10 High-Band Horizontal Beam Pattern
- 2.20 Low-Band Horizontal Beam Pattern
- 2.30 High-Band Vertical Beam Pattern
- 2.40 Low-Band Vertical Beam Pattern

3.00 MANUAL TILT ADJUSTMENT

4.00 "S" RET ACTUATOR INSTALLATIONS/REPLACEMENT PROCESS (Optional)

- 4.10 "S" RET Actuator Materials & Tools
- 4.20 Installation / Replacement Process (Reverse Process for Uninstallation)

5.00 RET Controller Display

- 5.10 RET Discover and Active
- 5.20 Beam 1-4 Operations Display

6.00 TRANSPORTATION / INSTALLATION


- 6.10 Transportation (From Point to Point)
- 6.20 Bracket Mounting
- 6.30 Installation using a crane
- 6.40 Antenna Installation

Revision History:


Date	Description	Revised by	Rev no
30-Jan-23	Revised Bracket Bolt & Nuts Information	Ray Ling	1
20-Jul-23	Include RET Controller Display	Ray Ling	2
01-Aug-23	Revised RET Controller Display	Ray Ling	3
09-Nov-23	Add RET AISG Cable Installation Caution Point	Ray Ling	4

1.00 BEAMS & CONNECTORS:

1.10 Plan View Resultant Beam Direction

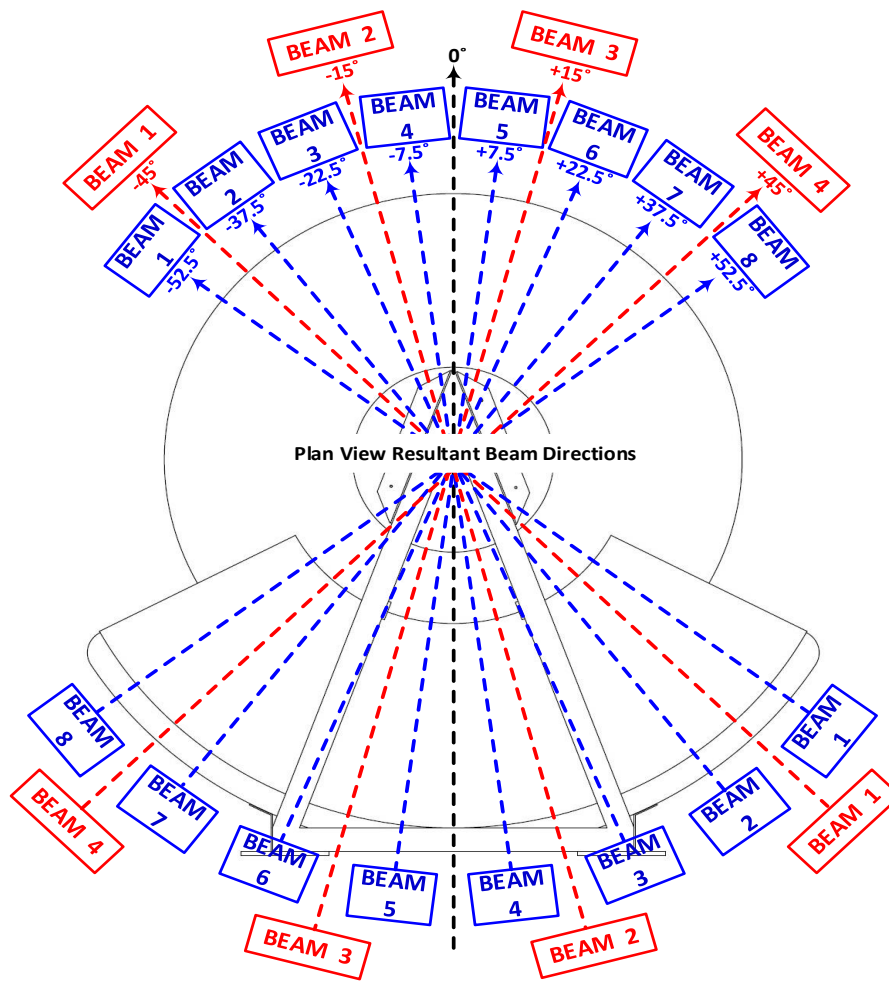

1.20 Plan View Connector Layout

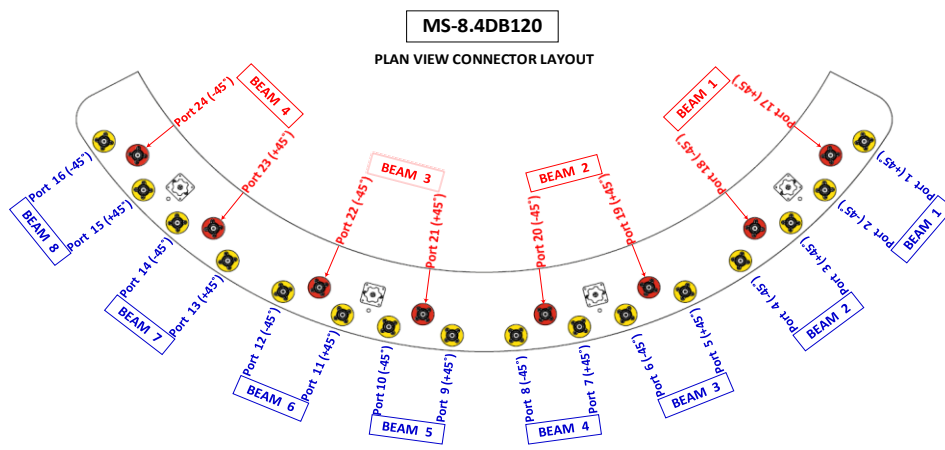


1.30 Ports Table


BEAM 4		BEAM 3		BEAM 2		BEAM 1	
PORT 24 (-45°)	PORT 23 (+45°)	PORT 22 (-45°)	PORT 21 (+45°)	PORT 20 (-45°)	PORT 19 (+45°)	PORT 18 (-45°)	PORT 17 (+45°)
BEAM 8	BEAM 7	BEAM 6	BEAM 5	BEAM 4	BEAM 3	BEAM 2	BEAM 1
PORT 16 (-45°)	PORT 15 (+45°)	PORT 14 (-45°)	PORT 13 (+45°)	PORT 12 (-45°)	PORT 11 (+45°)	PORT 10 (-45°)	PORT 9 (+45°)
PORT 8 (-45°)	PORT 7 (+45°)	PORT 6 (-45°)	PORT 5 (+45°)	PORT 4 (-45°)	PORT 3 (+45°)	PORT 2 (-45°)	PORT 1 (+45°)

2.00 PATTERN DIAGRAM


2.10 High-Band Horizontal Beam Pattern

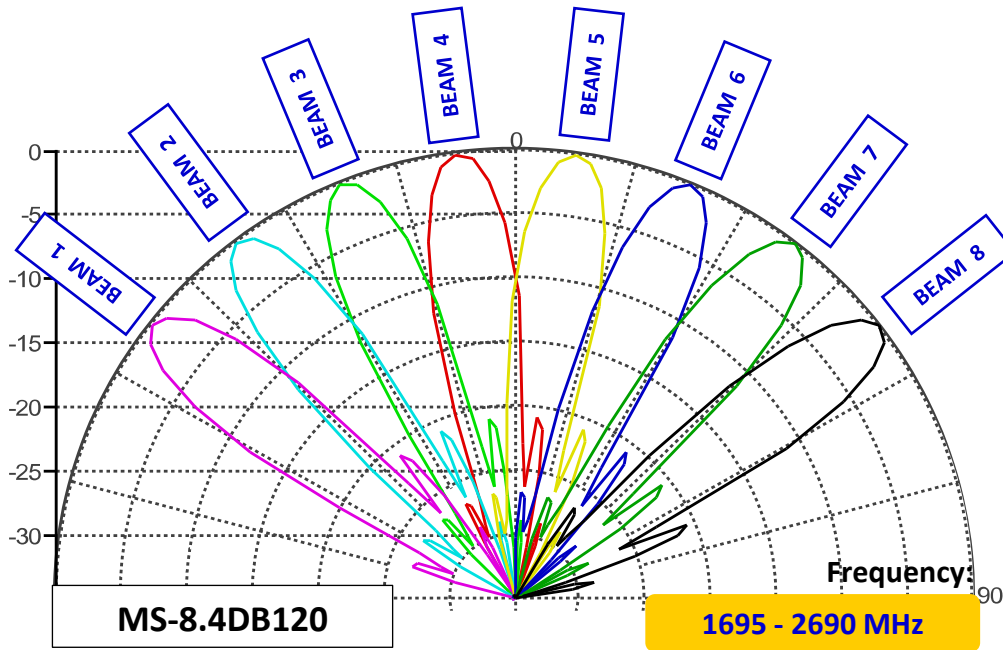


2.20 Low-Band Horizontal Beam Pattern

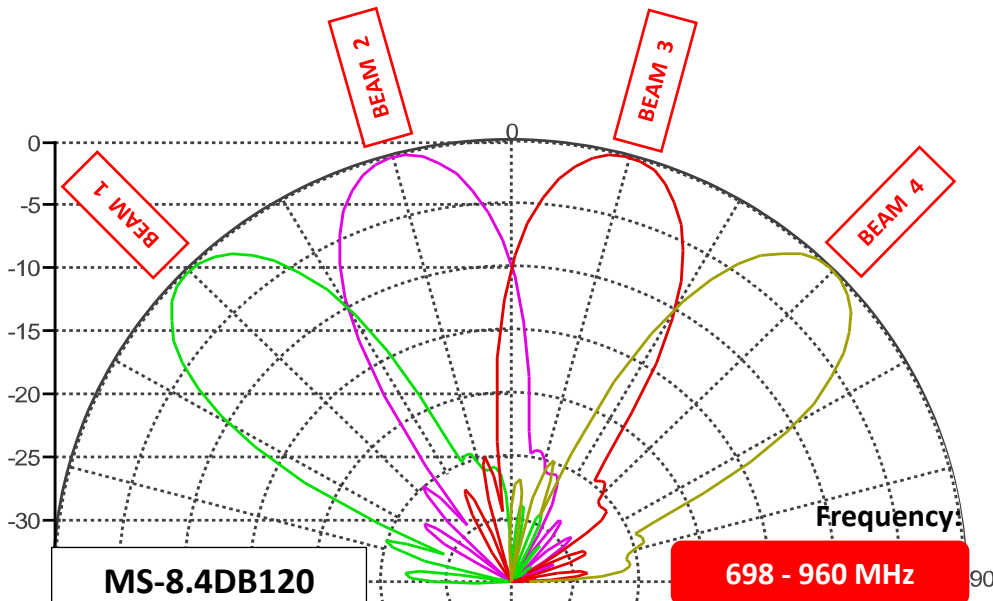

2.30 High-Band Vertical Beam Pattern

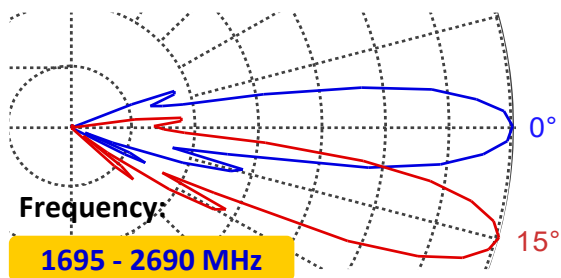

2.40 Low-Band Vertical Beam Pattern

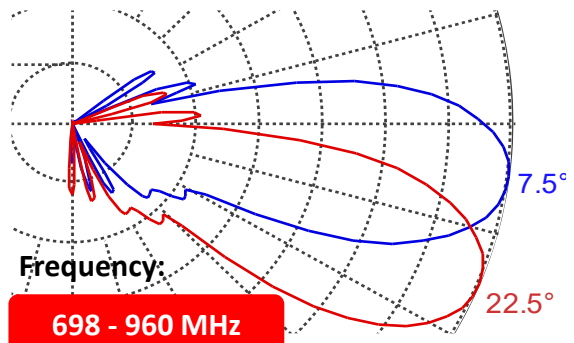

3.00 MANUAL TILT ADJUSTMENT

- Step 1:
Tilt Stopper Loosening
- Step 2:
Adjusting the Tilt
- Step 3:
Tilt Stopper Tightening

Step 1: Tilt Stopper Loosening
Use + Screw driver to loosen the 2 x M3 screws

Step 2: Adjusting the Tilt
By hand turning OR use screw driver

Step 3: Tilt Stopper Tightening
Use + Screw driver to tighten the 2 x M3 screws after adjust

Shaft Handle

Angle Indicator

Manual Tilt Adjustment

4.00 "S" RET ACTUATOR INSTALLATIONS/REPLACEMENT PROCESS (Optional)

4.10 "S" RET Actuator Materials & Tools

RET Attachment Interface Kits

Silicon Gasket RET Cover

Use M3 Hex Key

Hex Screw (M4 x 10mm) RET Attachment Interface

RET Attachment Interface (Sub-Assy)

Hex Adaptor

Screw Driver Metal Screw (M3 x 12mm)

Hex Adaptor L=22.5mm Internal 8Ømm

Shaft Stopper

Tighten Screw (M4 x 20mm) Fixing Screw (M4 x 15mm)

Shaft Stopper

Shaft Handle

Leadscrew Shaft Handle Hex Set Screw (M3 x 6mm)

M2 Hex Key


RET Actuator

MATSING Remote Electrical Tilt Unit ACS-RU370 RET-0000000043XX 201910

RET AISG Cable

4.20 Installation / Replacement Process (Reverse Process for Uninstallation)

Step 1: Uninstall the shaft stopper

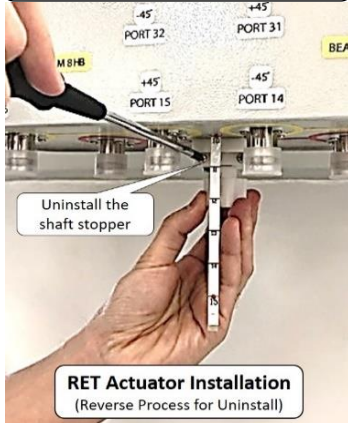


Step 2: Uninstall the shaft Handle




Step 3: Install the Hex adaptor and screw it on



Step 4: Install the RET attachment interface

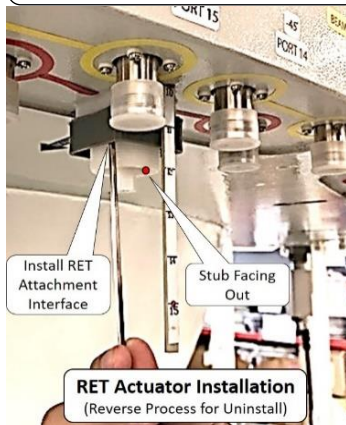

Step 5: RET Actuator stub gap facing out

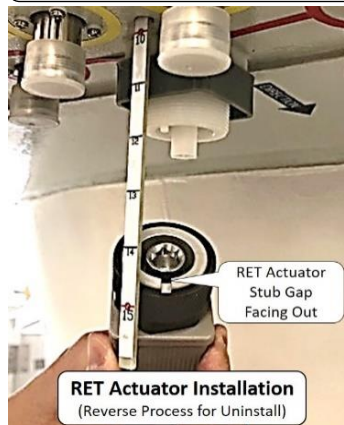

Step 6: RET Tighten to attachment interface



Step 7: Screw and tighten RET cable



ADVICE:


- ** Replace the AISG cable if is faulty.
- ** Same caution apply



Step 7 CAUTION

1. Do not apply any rotation force to the cable
2. Carefully align same direction to the keyway before insertion.
3. Insert direct (not angular) until well fully seated before turning.
4. Once both thread is fit can start slowly turning.
5. Tighten the AISG connector by hand only.
6. If use torque wrench do not exceed 1.1 Nm (0.8 ft if) torque.

Step 8: RET Actuator installation complete.

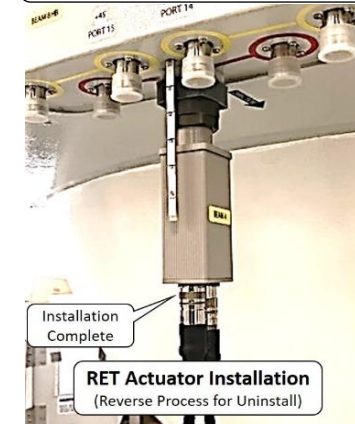

Repeat the same process for other actuator installation.

5.00 RET Controller Display

5.10 RET Discover and Active

ALD List

NO	HDLC	Vendor	Serial Number	Product Number	H/W Version	S/W Version	3GPP	Device	AISG	Connect	Link
1	1	MS	84DB120-0000506B1	ACS-RU370	1.00	5.12	6	Single RET	2	Connect	Link
2	2	MS	84DB120-0000506B2	ACS-RU370	1.00	5.12	6	Single RET	2	Connect	Link
3	3	MS	84DB120-0000506B3	ACS-RU370	1.00	5.12	6	Single RET	2	Connect	Link
4	4	MS	84DB120-0000506B4	ACS-RU370	1.00	5.12	6	Single RET	2	Connect	Link

Display 8.4DB120T (for T-Band) or **8.4DB120** (for L-Band)

5.20 Beam 1-4 Operations Display

RET Tilt Window

RET ID : MS84DB120-0000506B1

Display 8.4DB120T (for T-Band) or **8.4DB120** (for L-Band)

RET Status and Control

Antenna Information List

NO	Sector ID	Ant Model	Ant Serial	Current Tilt	Status
1/1	B1 (Ports H1,2,3,4, L17,18)	MS-8.4DB120	MS8.4DB1200000506	10.0	Normal

RET Tilt Window

RET ID : MS84DB120-0000506B2

Display 8.4DB120T (for T-Band) or **8.4DB120** (for L-Band)

RET Status and Control

Antenna Information List

NO	Sector ID	Ant Model	Ant Serial	Current Tilt	Status
1/1	B2 (Ports H5,6,7,8, L19,20)	MS-8.4DB120	MS8.4DB1200000506	10.0	Normal

RET Tilt Window

RET ID : MS84DB120-0000506B3

Display 8.4DB120T (for T-Band) or **8.4DB120** (for L-Band)

RET Status and Control

Antenna Information List

NO	Sector ID	Ant Model	Ant Serial	Current Tilt	Status
1/1	B3 (Ports H9,10,11,12, L21,22)	MS-8.4DB120	MS8.4DB1200000506	10.0	Normal

RET Tilt Window

RET ID : MS84DB120-0000506B4

Display 8.4DB120T (for T-Band) or **8.4DB120** (for L-Band)

RET Status and Control

Antenna Information List


NO	Sector ID	Ant Model	Ant Serial	Current Tilt	Status
1/1	B4 (Ports H13,14,15,16, L23,24)	MS-8.4DB120	MS8.4DB1200000506	10.0	Normal

6.00 TRANSPORTATION / INSTALLATION

6.10 Transportation (From Point to Point)


Strictly comply to the Local authority and regulatory on Workplace Safety and Health Control and Measure when moving and transportation of large or heavy equipment, appropriate material handling machine should be use.

(Risk Assessment apply for Forklift or Pallet Truck Lifting)

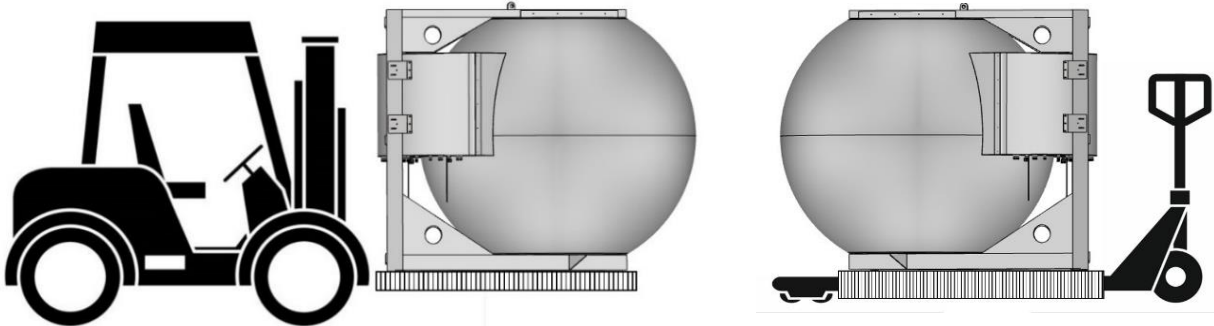

6.20 Bracket Mounting

Item	Lens Size	Holes Size	Bracket Qty	Bolt & Nuts Sets
1	120cm	Ø13mm x 8	4	M12 x 20cm = 8 Sets

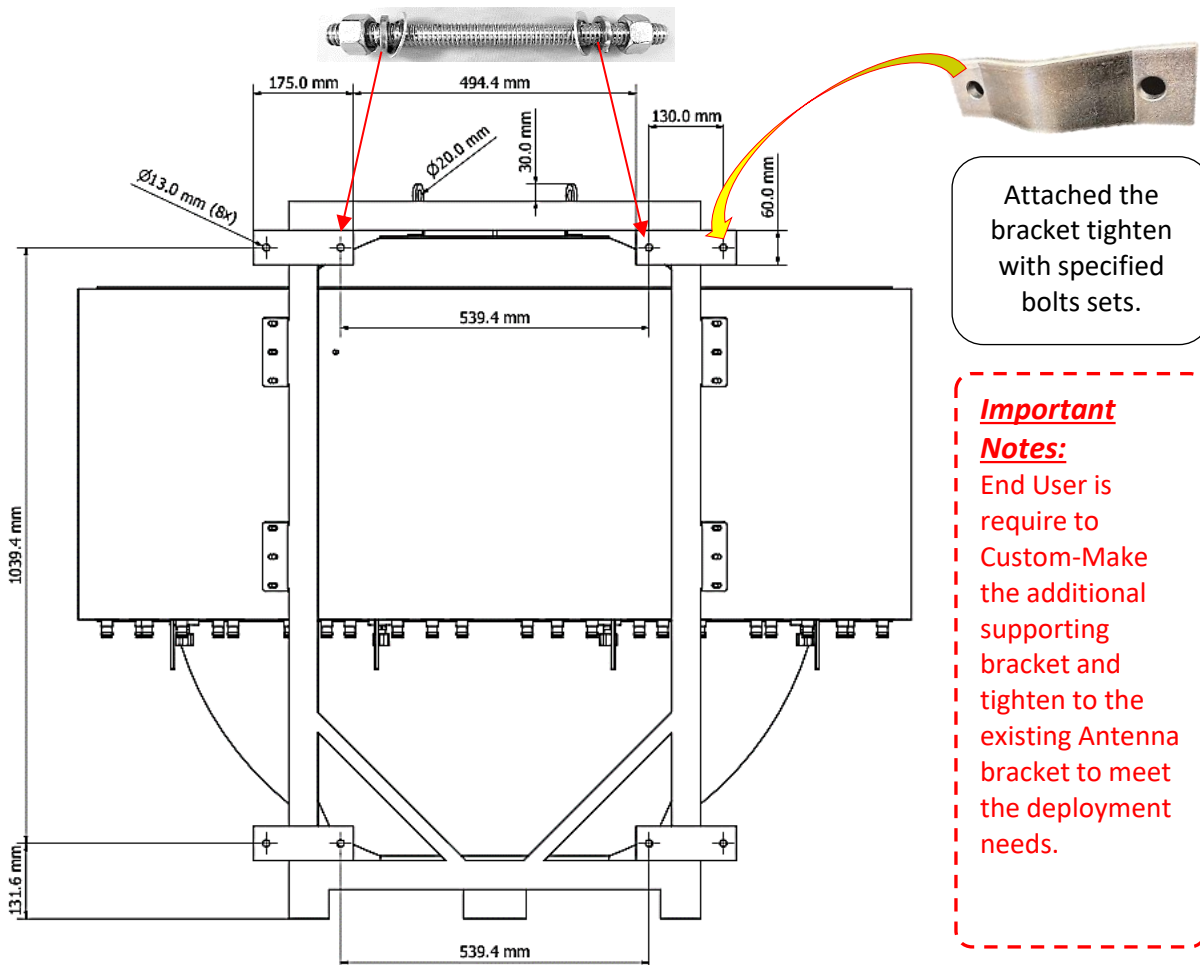


6.30 Installation using a crane

Strictly comply to the local authority and regulatory on Workplace Safety and Health Control and Measure when performing lifting of large or heavy equipment, appropriate material handling machine should be used and only certified personnel should perform the task.

(Risk Assessment requirement applies for both Up-Lifting and Down-Lifting.)

6.31 Lifting the Antenna

The antenna has 2 hook points installed on the top frame (located slightly behind the center of the sphere). These hooks are designed at the center of gravity point of the antenna. A cable, rope can be securely fastened to the hooks and the antenna can be lifted using a crane as pictured below.

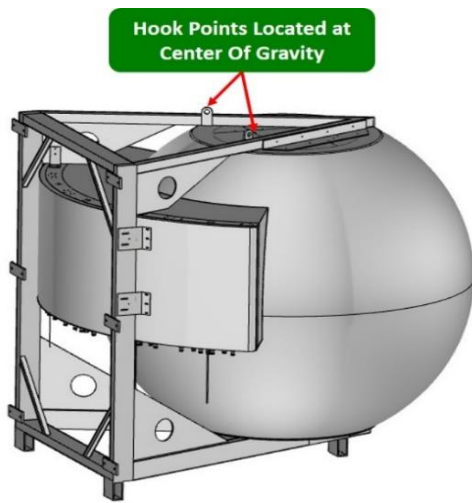


6.40 Antenna Installation

With reference to "**Bracket Mounting**" Procedure, End user is required to Custom-Make the additional supporting bracket and tighten it to the existing Antenna bracket to meet the deployment needs.

6.41 Antenna Levelling

After the Antenna is mounted to the bracket, it is required to be adjusted to 0° (Zero Degree) with $\leq 0.2^\circ$ on 3 sides of the frame top level. (Rear, Right & Left=As shown in picture)

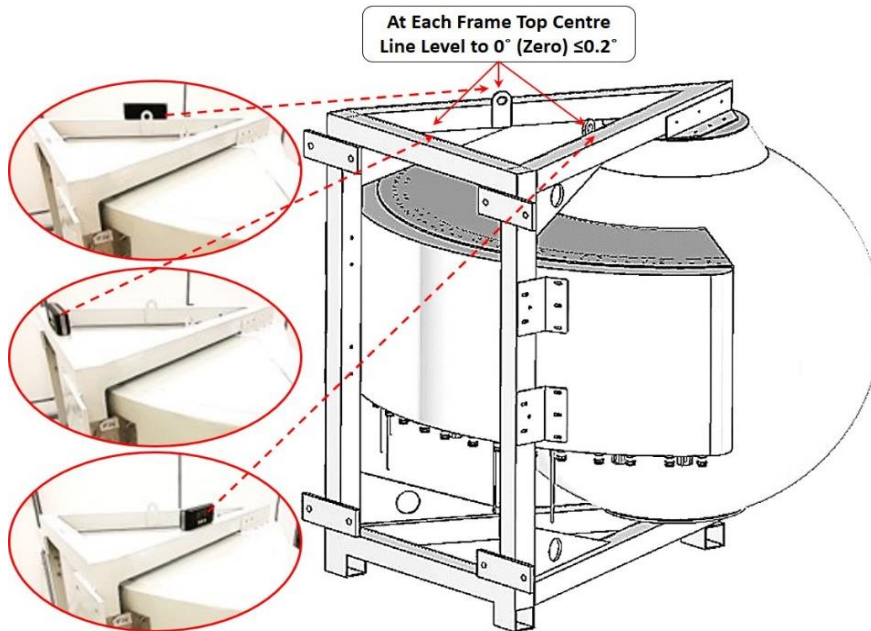

ANTENNA LEVELING ADJUSTMENT (AFTER INSTALLATION)

6.42 Digital Level Gauge Calibration



6.43 Adjustment Requirement



ANTENNA LEVELING ACCEPTED



REQUIRE ADJUSTMENT